



DIP settings

- 1=ON
- 2=OFF
- 3=ON
- 4=ON
- 5=ON
- 6=ON

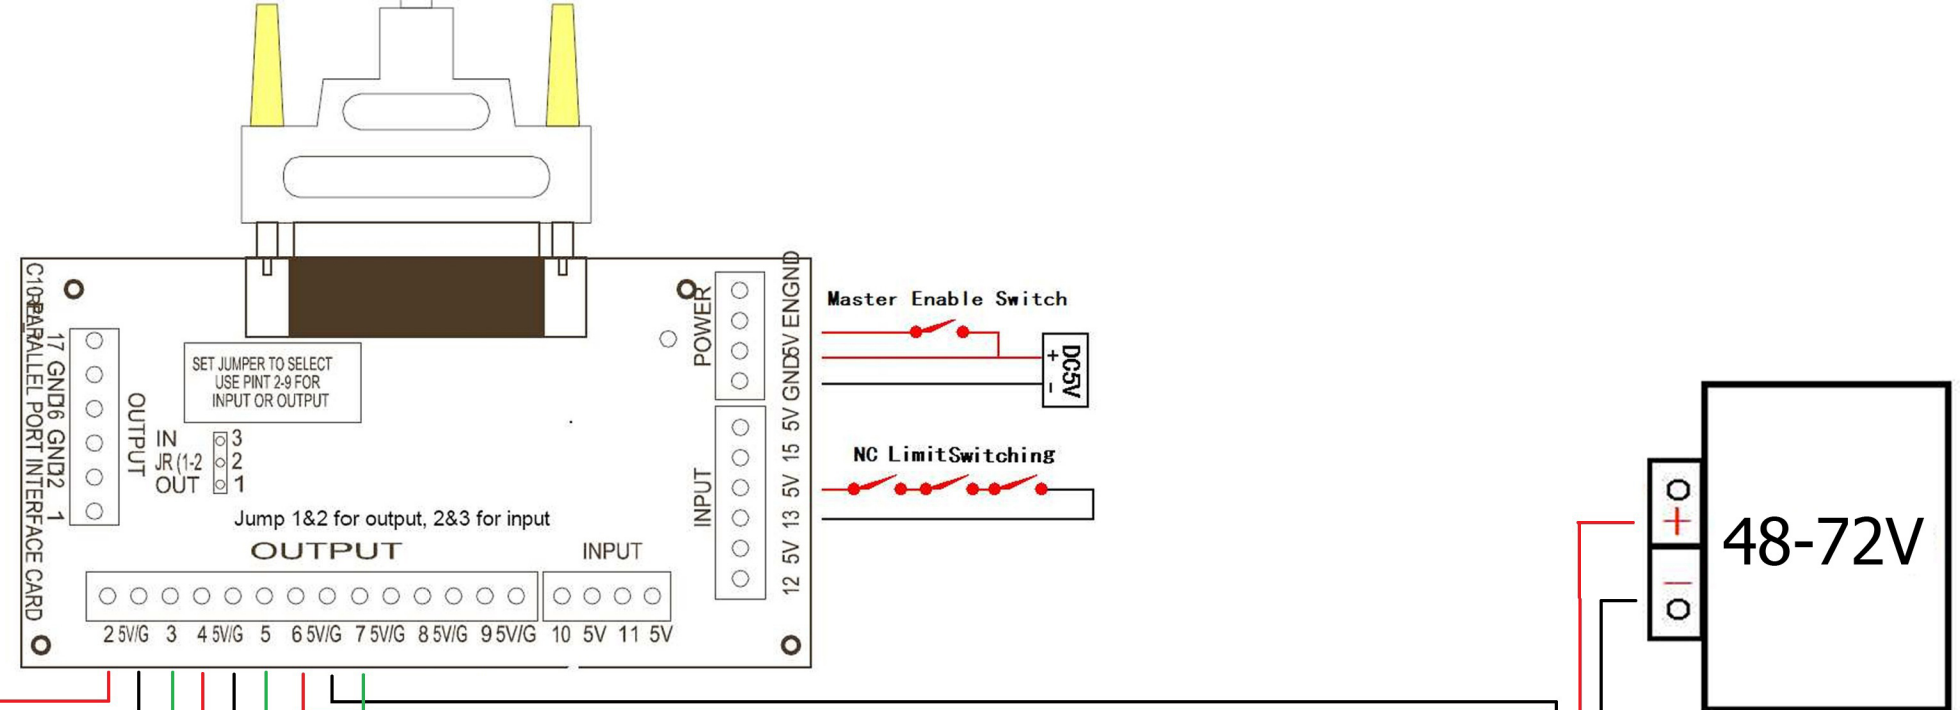

SW5: Motor DIR; off=CCW, on=CW
SW6: Motor SEL; on=KL8082H

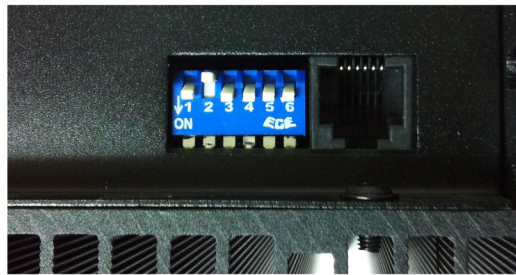