

FWD either jumped to DCM or wired to FWD(OUT0) on Motion Card
 10V from VFD to 10V-in on Motion Card
 ACM(common) from VFD to ACM(common) on Motion Card
 VI to AVI on Motion Card

